



## FILTROS INTERCAMBIABLES CON TOYOTA LIFT TRUCKS

### AIRE - AIR



**F4050A**

TOYOTA-17741-F9860-71  
TOYOTA-17743-U1100-71  
TOYOTA-17741-23600-71  
TOYOTA-17743-23600-71

### AIRE - AIR



**F4410A**

**INNER FOR F4050A**  
TOYOTA-17744-23600-71  
TOYOTA-17744-F9860-71

### AIRE - AIR



**F4400A**

TOYOTA-17806-23800-71  
TOYOTA-17808-23800-71  
TOYOTA-17806-F9880-71



**F4130A**

TOYOTA-17741-30510-71  
TOYOTA-17741-F9810-71



**F6027A**

**INNER FOR F4130A**  
TOYOTA-17742-30510-71



**F1000/11**

TOYOTA-17801-43010  
TOYOTA-17801-43010  
TOYOTA-17801-44010  
TOYOTA-17801-44011  
TOYOTA-17801-76001  
TOYOTA-23301-30205



**F6031A**

TOYOTA-17741-U210071



**F6032A**

**INNER FOR F6031A**  
TOYOTA-17744-U210071



**FT1182**

### GASOIL - FUEL

TOYOTA-23303-64010  
TOYOTA-23303-56040  
TOYOTA-23303-64021  
TOYOTA-23303-76002  
TOYOTA-23390-24480  
TOYOTA-23390-64480



**F4096A**

TOYOTA-17752-20540-71  
TOYOTA-17792-22000-71  
TOYOTA-17801-23001-71  
TOYOTA-17801-F9801-71  
TOYOTA-17803-23001-71



**F4182A**

**INNER FOR F4096A**  
TOYOTA-17791-22000-71



**FP588F**

### GASOIL - FUEL

TOYOTA-23302-31960-71  
TOYOTA-23300-54010  
TOYOTA-23303-56021  
TOYOTA-23303-56022  
TOYOTA-23303-56030  
TOYOTA-18600-00150  
TOYOTA-18610-00580

### ACEITE - OIL



**PH2835**

TOYOTA-32670-12620  
TOYOTA-15601-76009  
TOYOTA-15601-13051  
TOYOTA-90915-03002  
TOYOTA-90915-20001  
TOYOTA-90915-20002  
TOYOTA-90915-20004

### ACEITE - OIL



**PH8A**

TOYOTA-15600-41010  
TOYOTA-15601-78101